

Honda IGX700/800

Notes:

To Connect Remote Start/Stop Box

Step 1. Connect the Red wire from the remote box to B+ on the starter solenoid.

Step 2. Connect the Black wire to the engine ground. (If possible, use the same ground bolt as your main negative battery cable)

Step 3. Locate red t-tap connector place this on white wire with a black stripe coming out of the ignition control box. See picture for how to install t-tap.

Step 4. Once t-tap is installed insert the connector from the orange wire into the t-tap

Step 5. Locate the white wire with a black stripe that has a spade terminal located on the back of the starter solenoid. Disconnect this by carefully pulling the connection apart.

Step 6. Connect the Green wire from the remote start box to each corresponding wire on the engine.

To Start the Engine

Step 1. Press "A" button on Remote. (This will turn the ignition on)

Step 2. Press and hold the "B" button this will turn the engine over. Once the engine has started release the "B" Button.

To Stop the Engine

Step 1. Press the "A" button on the remote. This will turn the ignition off and stop the engine.